

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit https://www.performanceparts.ford.com for warranty information








NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Kit contents:

<u>Description</u>	Quantity
FPP F-150 Black Pack Oval (Grille)	1
FPP F-150 Black Pack Oval (Tailgate)	1

Special Tool(s) / General Equipment

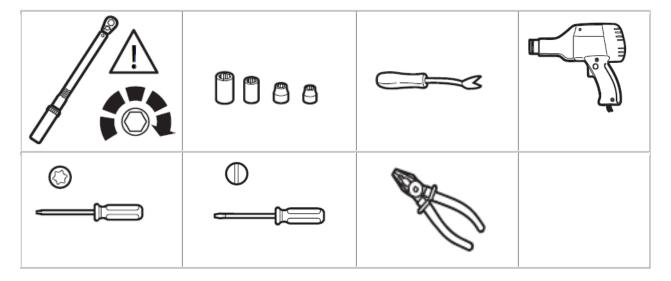

Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>

Techline 1-800-367-3788 Page 2 of 25 IS M-1447-F15B 032322



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


2018-2020MY Removal - Grille Oval

NOTE: Removal steps in this procedure may contain installation details.




1 Extreme cold weather will cause breakage. A hair dryer can be used to localize warmth before flexing release tabs.

1. Remove the push pin retainers, position aside the air intake duct, and remove the air deflector.

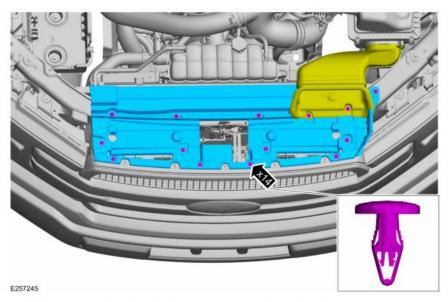

2. NOTE: As equipped. Disconnect the electrical connectors and washer hose.

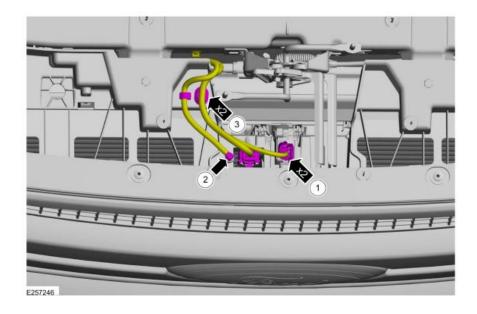




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

- Raise the vehicle on a hoist.
 Refer to: Jacking and Lifting Overview (100-02 Jacking and Lifting, Description and Operation).
- 4. **NOTE:** Vehicles equipped with fender mouldings.

On both sides.

Remove the 2 screws and release the 3 front fender moulding retainers and position the fender moulding out. *Torque*: 22 lb.in (2.5 Nm)

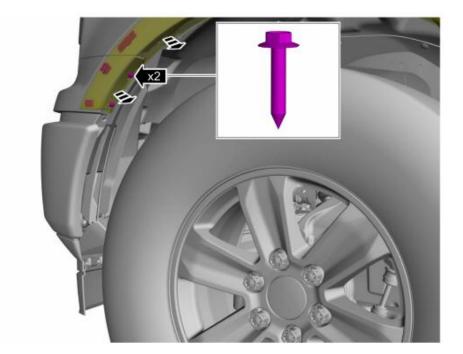


E257247




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. **NOTE:** On both sides, remove the front bumper upper cover trim panel bolts. *Torque*: 22 lb.in (2.5 Nm)

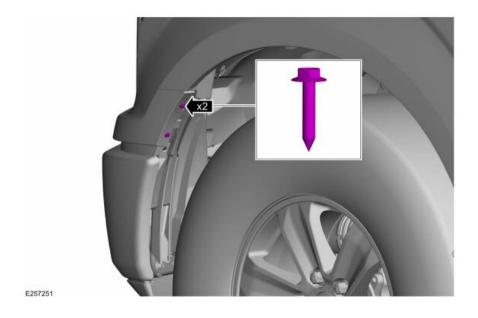


- 6. Remove the front bumper upper cover trim panel.
 - Using a flat-blade screwdriver release the locking tabs
 - Release the front bumper upper cover trim panel clips and remove the front bumper upper cover trim panel.

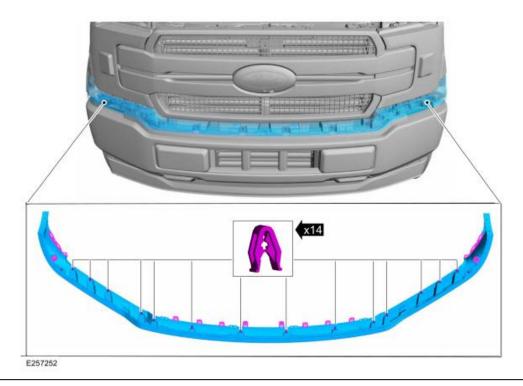




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

7. Remove the bolts and the pin-type retainer. *Torque*: 28 lb.in (3.2 Nm)

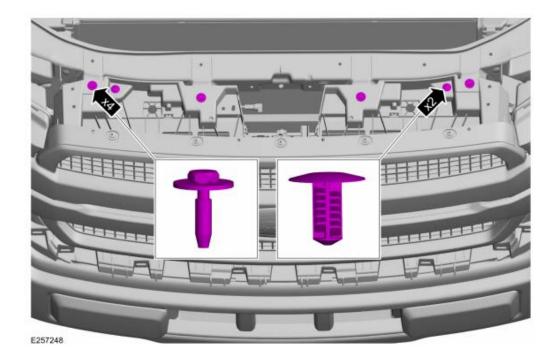

8. Remove the active grille shutter mounting bolts. *Torque*: 159 lb.in (18 Nm)

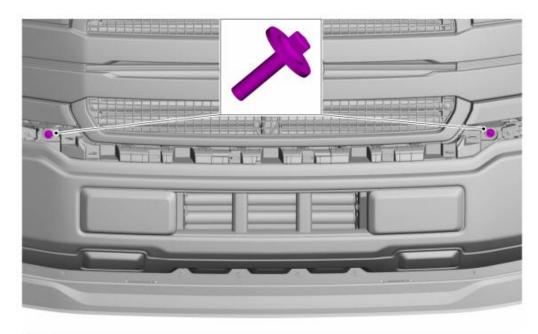


E257249




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

9.

- Remove the pin-type retainer.
- Pull up to disengage the locating pins along the top of the grille.
- Pull forward on center of the grill to remove.

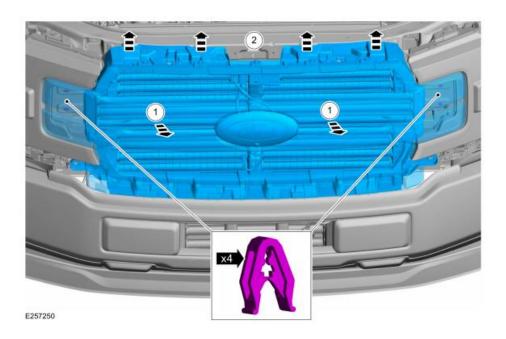


10. Remove the push pins.

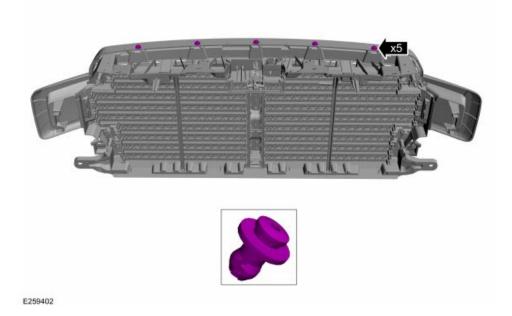




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

11. Remove the retainers and the deflector.

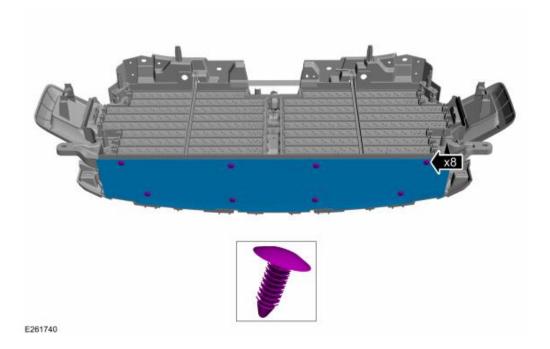


12. Remove the clips.

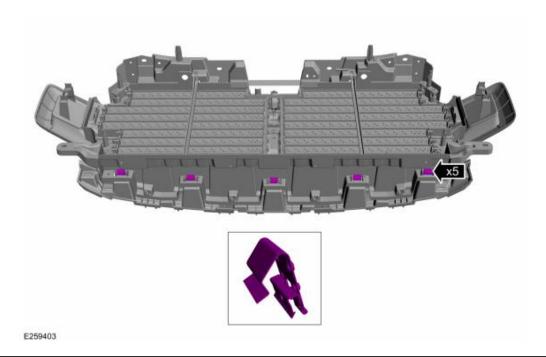



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


13. Remove the screw and the nuts. *Torque*: 1: 22 lb.in (2.5 Nm) 2: 44 lb.in (5 Nm)

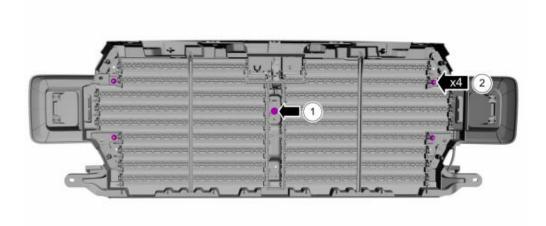

E259404

14. NOTE: If equipped with front camera, disconnect the camera and the washer hose.

Separate the active grille shutter from the radiator grille.

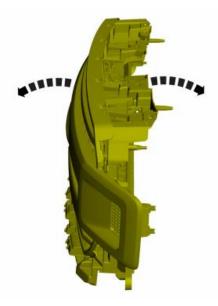

E259405




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

15. Remove the upper active grille shutter.




16. Remove screws from the oval.

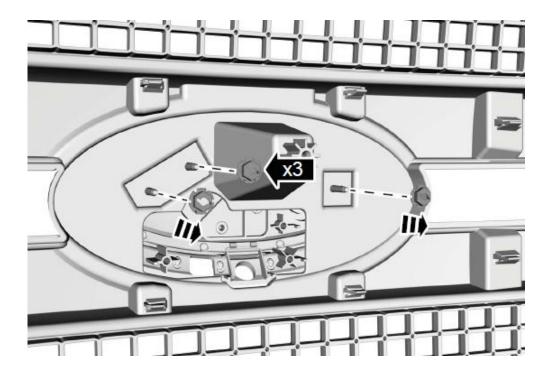



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

17. Remove oval.

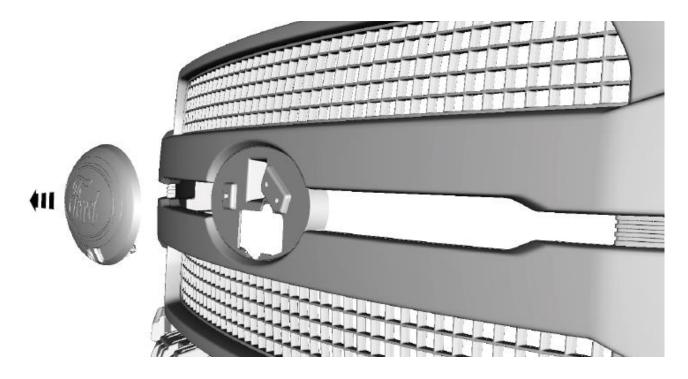



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


2021-2022MY Removal - Grille Oval

NOTE: Removal steps in this procedure may contain installation details.



Extreme cold weather will cause breakage. A hair dryer can be used to localize warmth before flexing release tabs.


1. Remove the push pin retainers, position aside the air intake duct, and remove the air deflector.

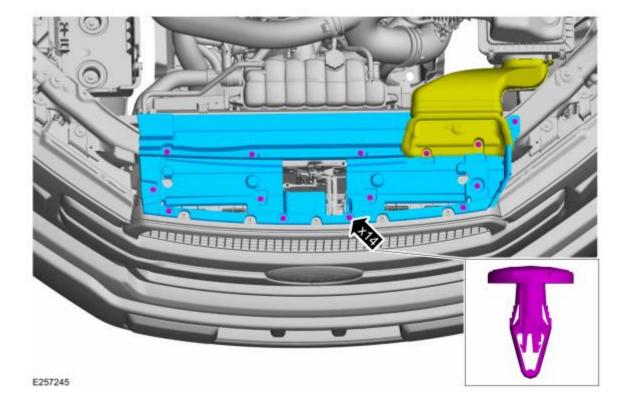




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. **If equipped**, Disconnect the electrical connectors and washer hose.

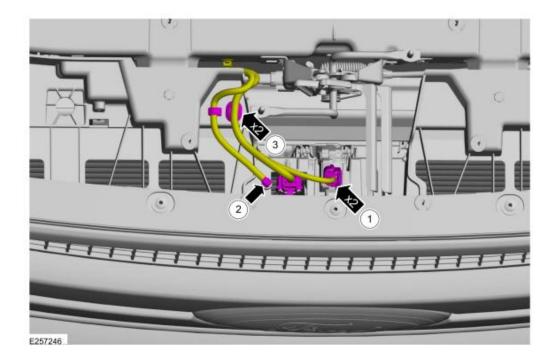

3. On both sides, remove the 2 screws. Torque: 15 lb.in (1.7 Nm)

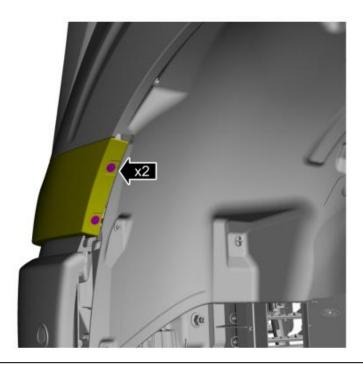





NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Remove the front bumper upper cover trim panel using a flat-blade screwdriver to release the locking tabs.



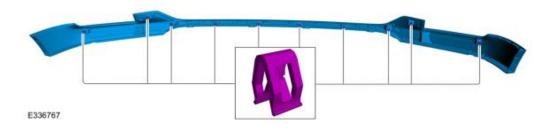

5. Remove the bolts and the pin-type retainer. *Torque*: 36 lb.in (4.1 Nm)

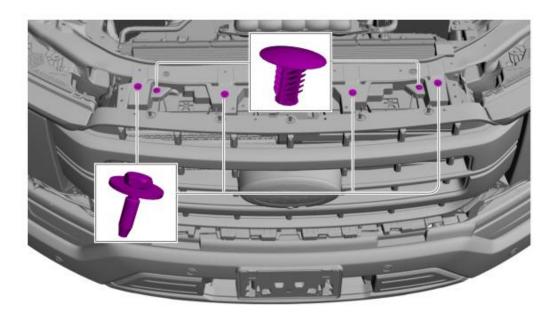


E336769




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

6. Remove the active grille shutter mounting bolts. *Torque*: 159 lb.in (18 Nm)

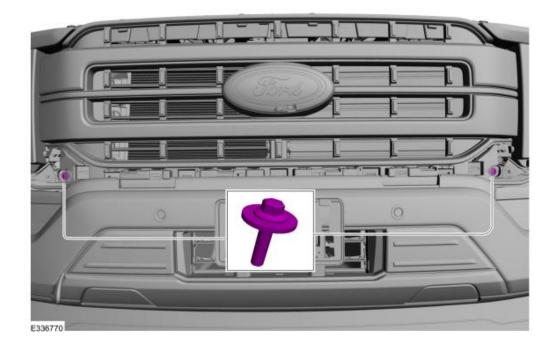

7. Remove the pin-type retainer. Pull up to disengage the locating pins along the top of the grille. Pull forward on center of the grille to remove.

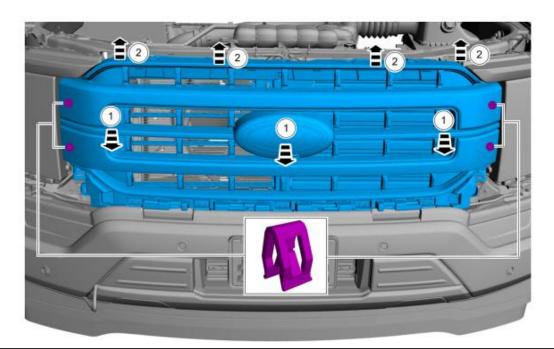





NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Upper Active Grille Shutter Removal

1. Remove the push pins.

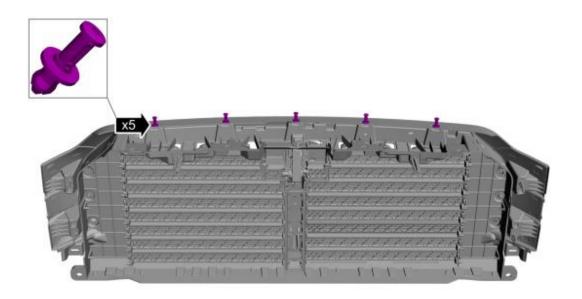


2. Remove the retainers and the deflector.

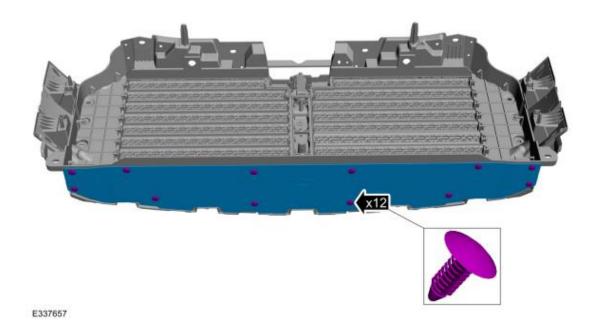




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the clips.

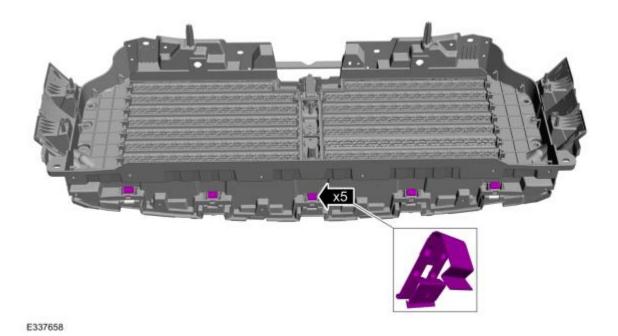


4. Remove the screw and the nuts. *Torque*: 1: 22 lb.in (2.5 Nm) 2: 44 lb.in (5 Nm)

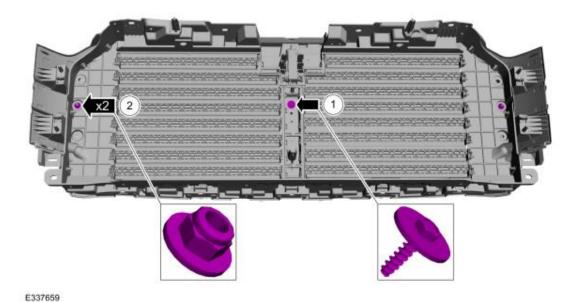




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. Separate the active grille shutter from the radiator grille.

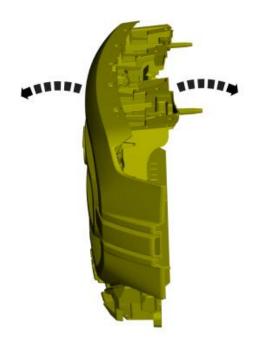

E337660


6. **NOTE:** If equipped with front camera. Disconnect the electrical connector and the washer hose.

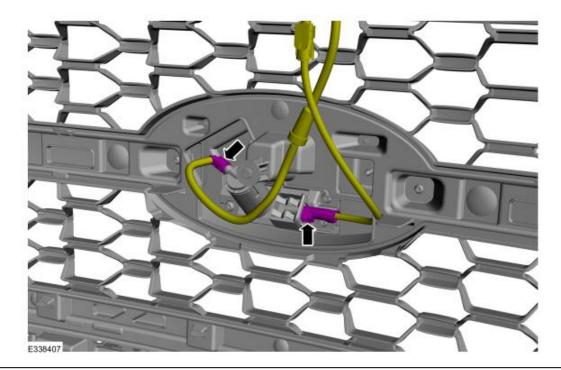




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

7. Remove the upper active grille shutter.

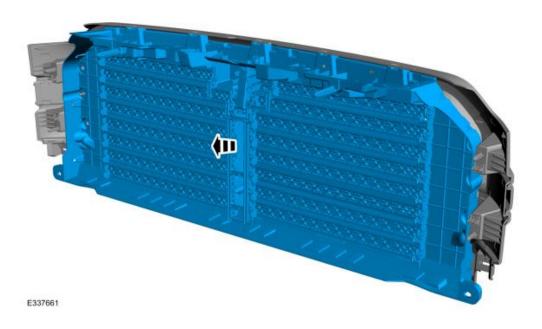

8. If equipped, remove the pin-type retainers and the wire harness.

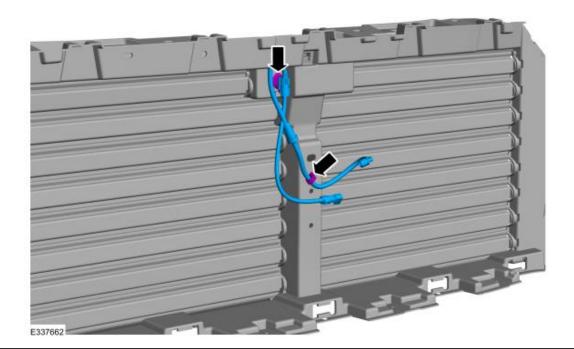



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Grille Oval Removal

NOTE: Removal steps in this procedure may contain installation details.

1. If equipped, extend the front camera washer nozzle door, release the tabs and remove the washer nozzle door.




2. Remove the screws and the front camera washer and bracket as an assembly.

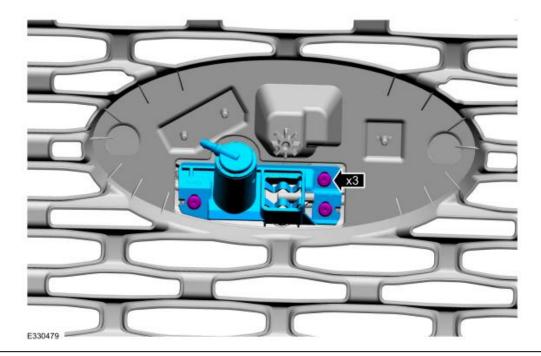



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the front parking aid camera and oval.

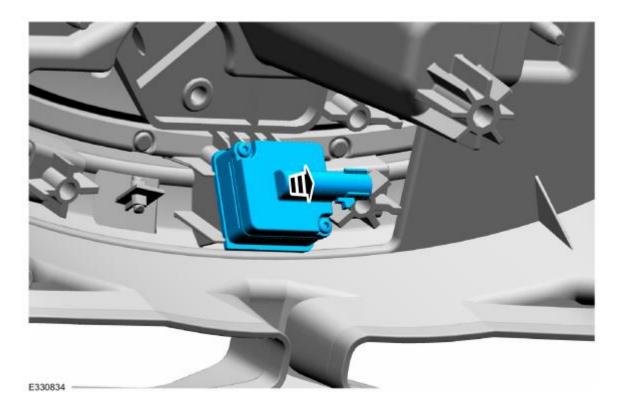

Installation

1. To install, reverse the removal procedure.




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Removal - Tailgate Oval

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the screws from the tailgate liner. *Torque*: 28 lb.in (3.2 Nm)

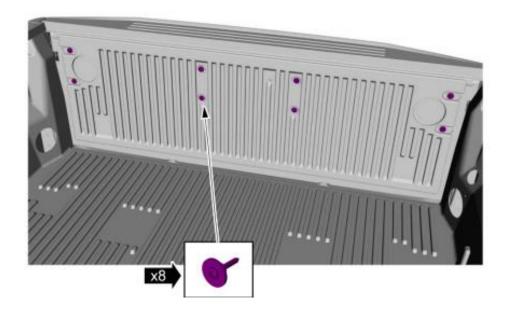


2. Remove the tailgate liner.

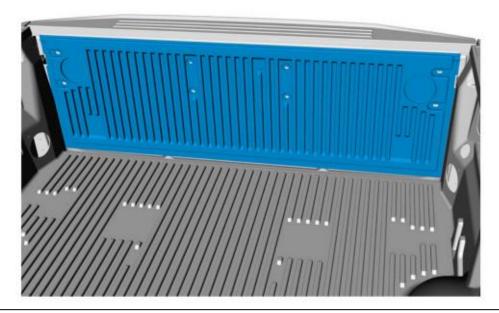




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the screws from the inner panel. *Torque*: 28 lb.in (3.2 Nm)

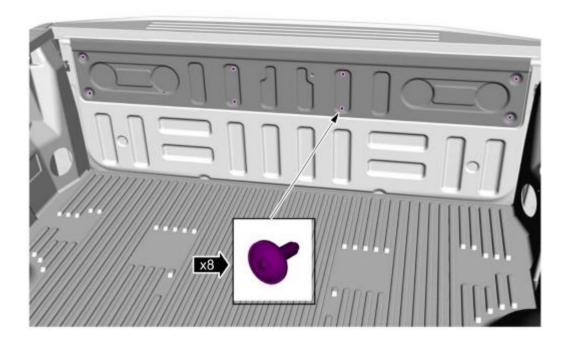

4. Remove the inner panel.

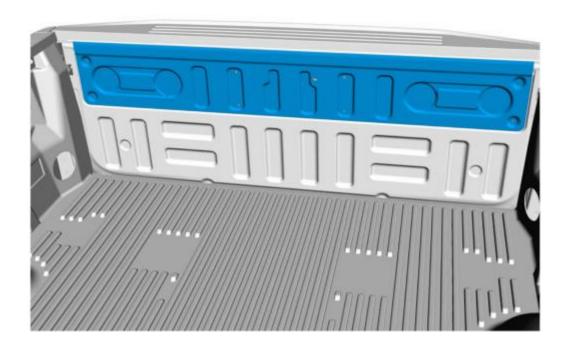




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. Use pliers to undo clips on the rear of the oval and remove from the tailgate.



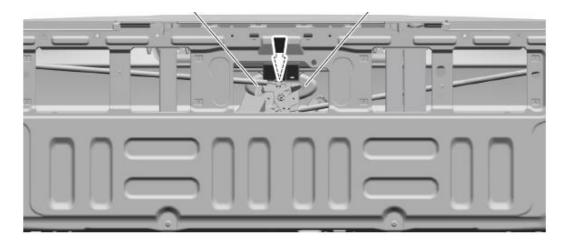








NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Installation - Tailgate Oval

1. To install the new oval, remove the adhesive backing and firmly press onto the tailgate.

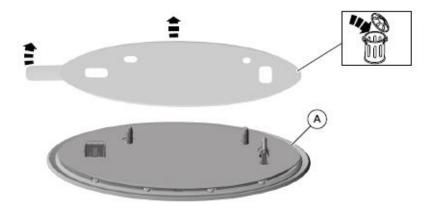





10 lb (4.5 kg)