

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting (100-02 Jacking and Lifting, Description and Operation).

Vehicles With: Front Parking Aid

2. Disconnect the front bumper harness electrical connector.

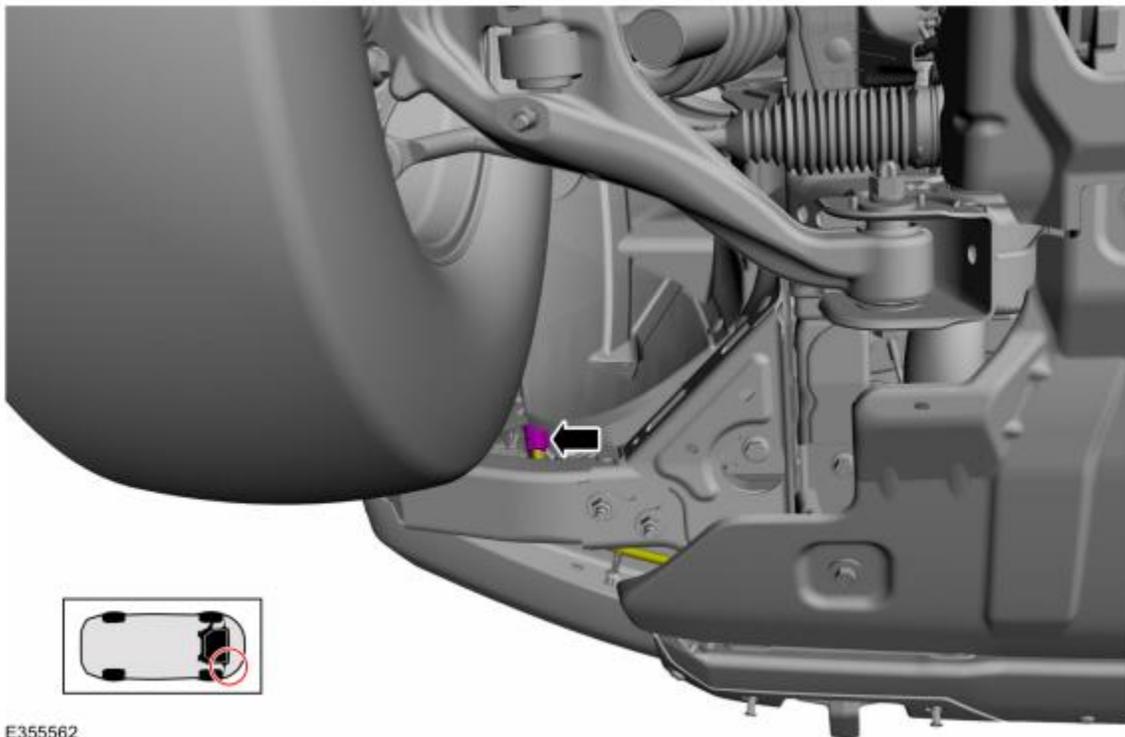


E355562

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the push pins, release the clips and remove the front bumper trim panel.

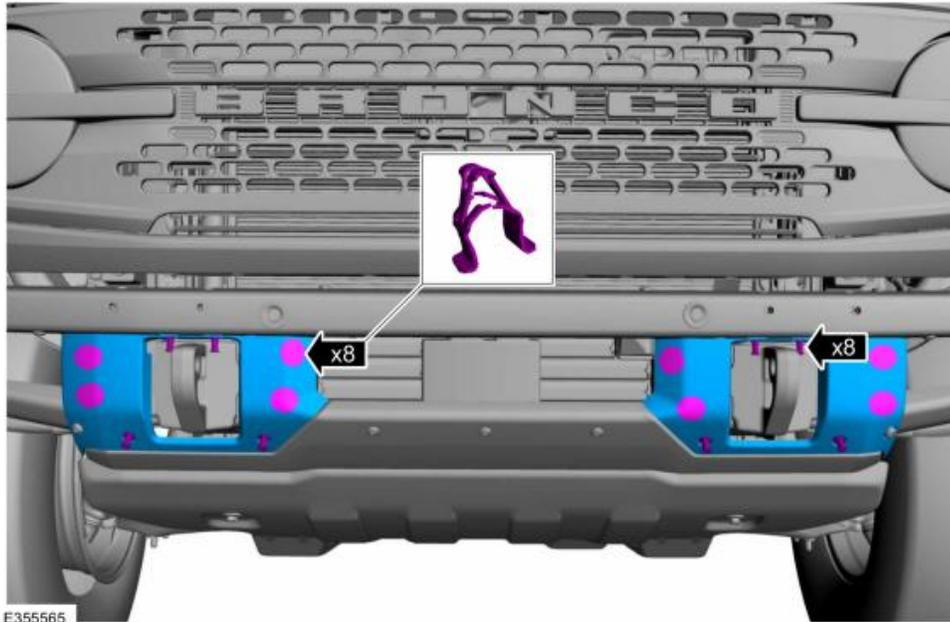

4. **NOTE:** This step requires the aid of another technician.

Remove the bolts and the front bumper.
Torque: 81 lb.ft (110 Nm)



Ford Factory Shop Manual purchase options www.motorcraftservice.com




FORD PERFORMANCE

M-18955-BO / -BR / -BB
Model 2021 →
Modular Front Bumper Tow Hooks

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. Remove the bolts and the tow hook brackets.
Torque: 35 lb.in (4 Nm)

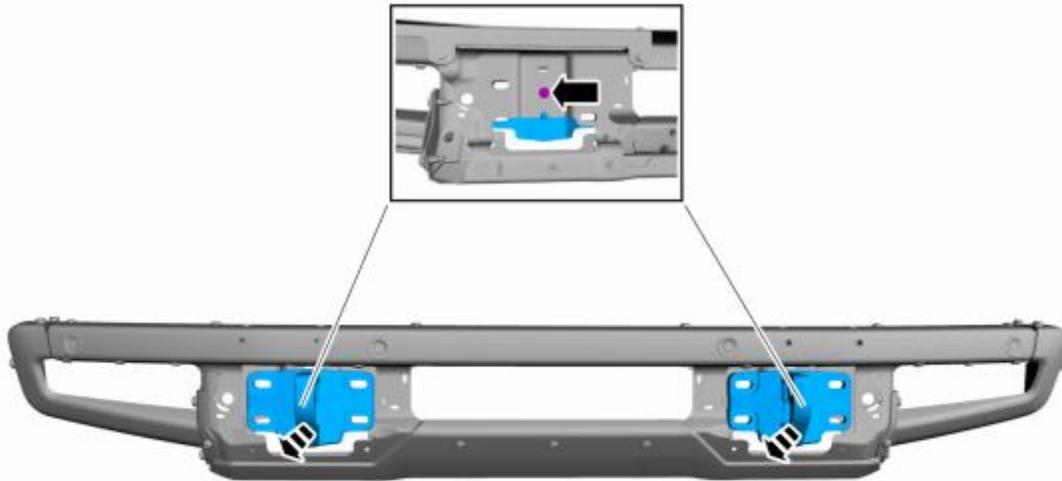

E355608

6. Install provided tow hooks
7. To install, reverse the removal procedure

Ford Factory Shop Manual purchase options www.motorcraftservice.com