



M-5025-M8 Mustang Manual Transmission Cooler Scoop INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

Please visit www.fordracingparts.com for the most current instruction information

**!!! PLEASE READ ALL OF THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION.
AT ANY TIME YOU DO NOT UNDERSTAND THE INSTRUCTIONS, PLEASE CALL THE FORD RACING
TECHLINE AT 1-800-367-3788 !!!**



SCOOP KIT:


Quantity	Part Name
1	Transmission Scoop
2	M10 x 20MM Bolt
2	M10 x 60MM Bolt
4	M10 Lock Nut
2	Sleeve

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

INSTALLATION INSTRUCTIONS:

STEP 1: Raise and support vehicle to gain access to underside.

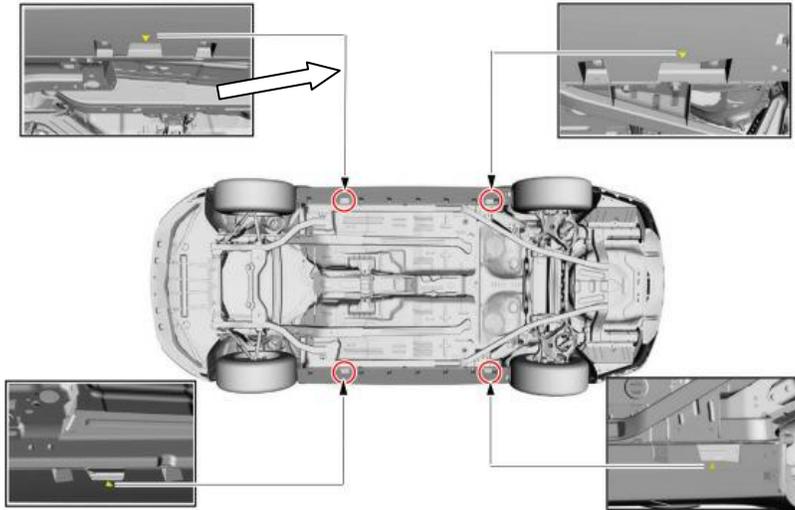

STEP 2: Locate the (4) existing holes in the front engine cradle.



Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.


STEP 3: Slide the transmission scoop over the rearward portion of the engine cradle. Slide towards the front of the vehicle until the existing hole aligns with the transmission scoop provision.



STEP 4: Position the (2) provided sleeves over the (2) provided M10 x 60mm bolts.



STEP 5: Slide the bolt with sleeve through the transmission scoop and engine cradle. Loosely install the provided M10 lock nuts.

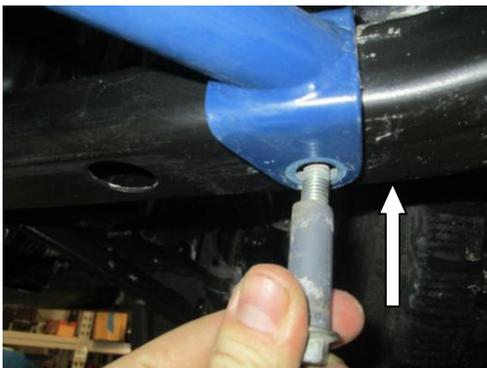

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 6: Feed the provided M10 x 20mm bolt into the forward portion of the engine cradle and place into the locating position. Repeat on the opposite side and loosely install the provided lock nuts.




STEP 7: Tighten the (2) rearward M10 x 60mm bolts and torque to 31 ft lbs.



M-5025-M8 Mustang Manual Transmission Cooler Scoop INSTALLATION INSTRUCTIONS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

STEP 8: Tighten the (2) forward M10 x 20mm bolts and torque to 31 ft lbs.

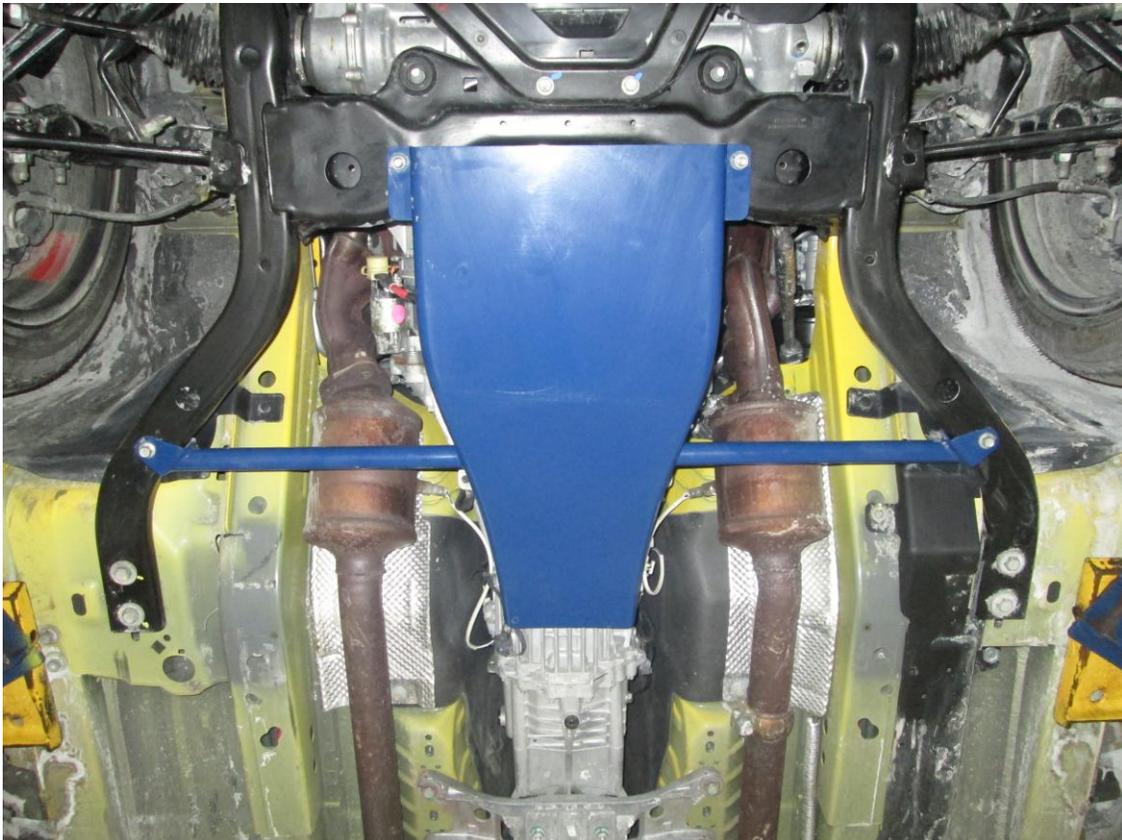

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356