

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788


Please visit https://www.performanceparts.ford.com for warranty information

Removal and Installation Procedure

Inner Luggage Compartment Lid Moulding

Removal

1. Remove the luggage compartment lid trim panel.

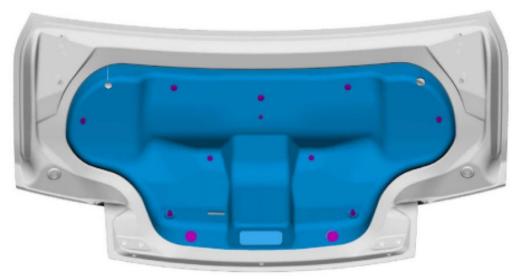


Ford Factory Shop Manual purchase options www.motorcraftservice.com

Techline 1-800-367-378 Page 1 of 5 IS M-16600-MA 062620



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Disconnect the rear parking aid camera electrical connector.

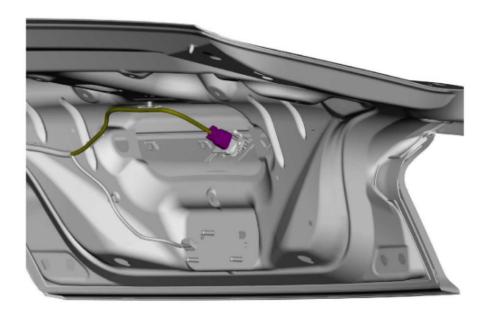

3. Remove the screw covers.




Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Remove the screws. Torque: 13 lb.in (1.5 Nm)

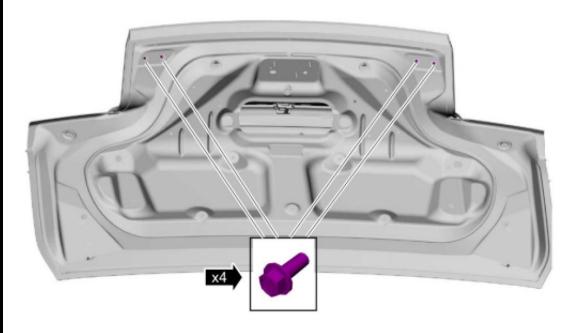

- 5.
- ✓ Disengage the W-clips from the luggage compartment lid moulding using a non-marring trim removal tool.
- ✓ Depress molded clips to disengage.




Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

6. NOTE: Base version badge shown, all others similar. Remove the luggage compartment lid moulding.

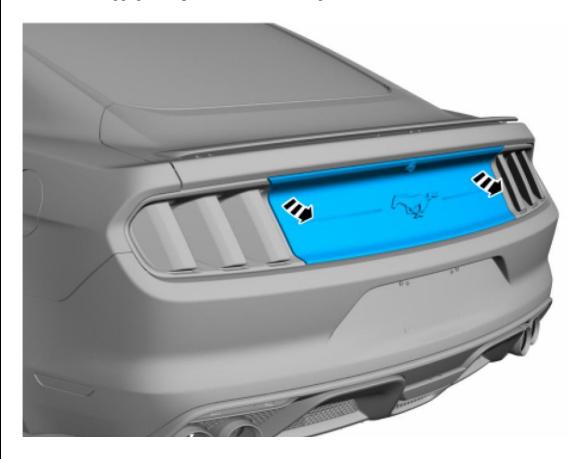

7. NOTE: If required, remove the attachment bracket.

Remove the screws.

Torque: 28 lb.in (3.2 Nm)

Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020



8. Remove the luggage compartment lid moulding bracket.



Installation

1. **NOTE**: Ensure the moulding engages luggage compartment lid bracket before the w-clips engage.

To install, reverse the removal procedure.

2. If installing a new moulding, configure the rear video camera following the instructions on the Ford scan tool located using the following path: Electrical> Service Functions>LIN New Module Initialization.

Ford Factory Shop Manual purchase options www.motorcraftservice.com

Techline 1-800-367-378 Page 5 of 5 IS M-16600-MA 062620